



# SafeStop PedestrianBarrier

## INSTALLATION INSTRUCTIONS

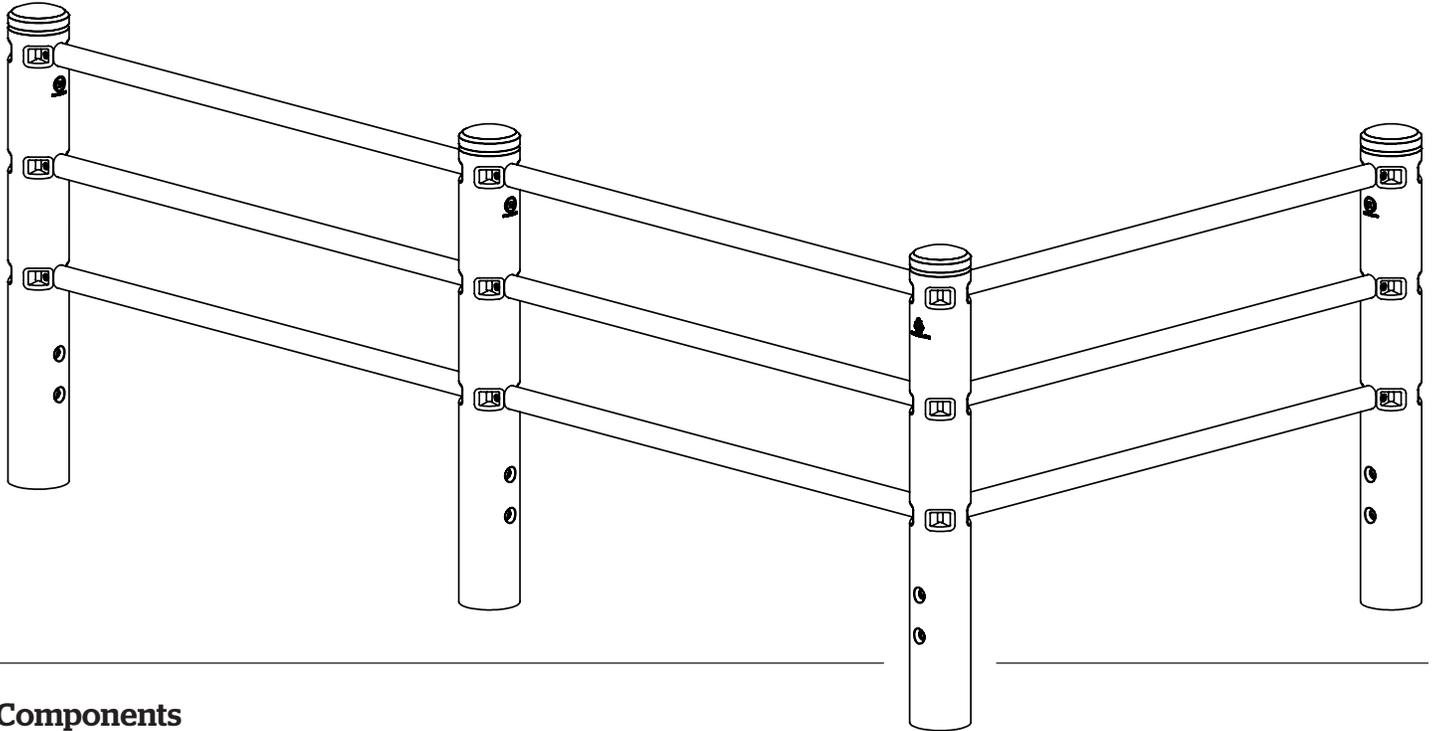


### Components

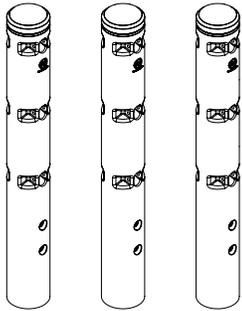

Post Options  
PB-K-CNR, PB-K-END  
& PB-K-MID



Core Kit

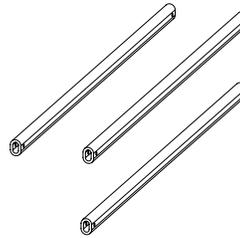

Rails  
PB-C-RAL



Concrete Anchor  
HW-C-A58

### Tools Required



Marker



Chalk  
Line



Saw



7/32" Hex  
Bit



Measuring  
Tape



Mallet



Socket or  
Adjustable Wrench



Hammer/Rotary  
Drill with 5/8" Bit



9/16" & 15/16" Sockets  
with Extender



Drill &  
Driver



**McCue Corporation**  
Danvers, Massachusetts, USA  
+1 (800) 800 8503  
customer care@mccue.com

**McCue UK & Europe**  
Milton Keynes, United Kingdom  
+44 (0)1908 365 511  
uksales@mccue.com


**McCue Asia**  
迈客(厦门)有限公司  
Xiamen, Fujian, China  
+86-592-2200790

[mccue.com](http://mccue.com)






1

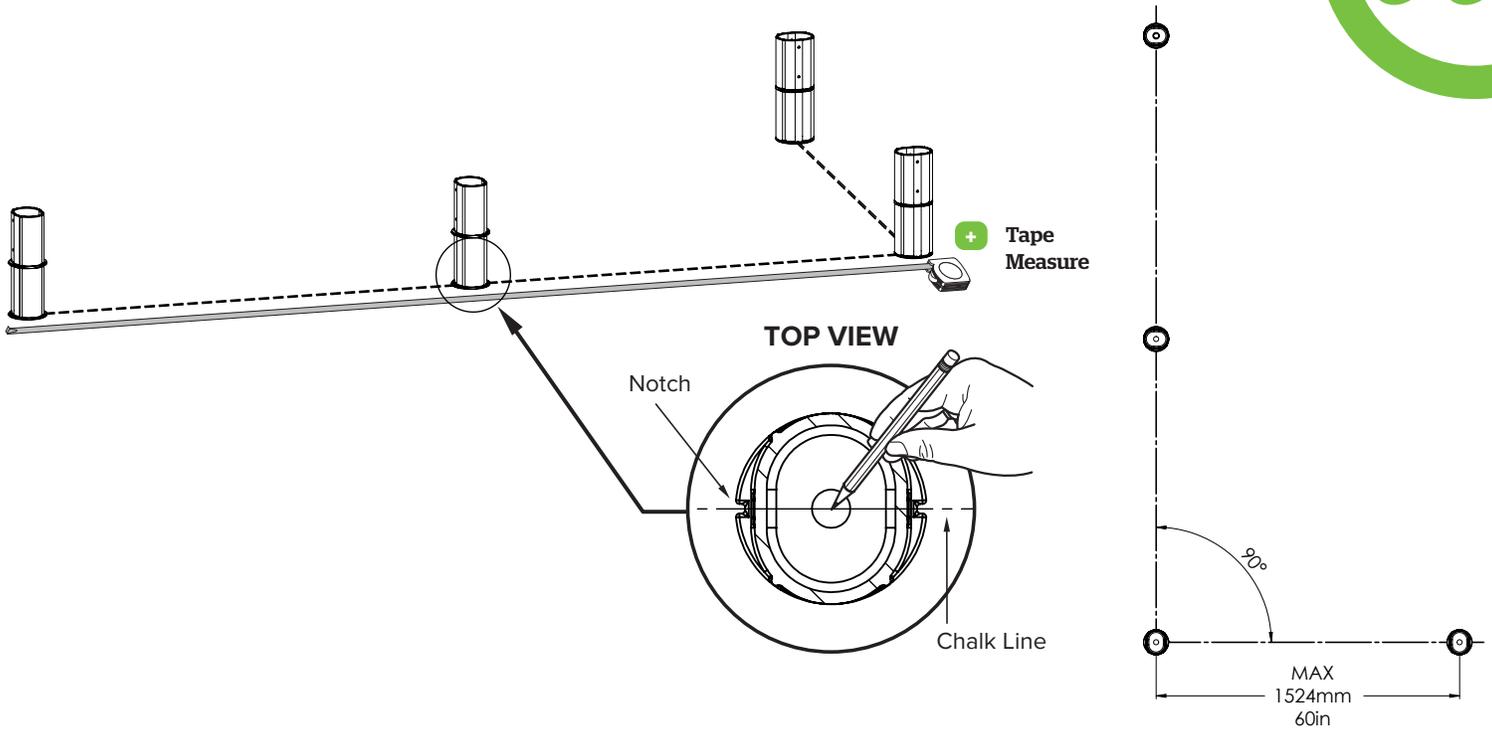


2

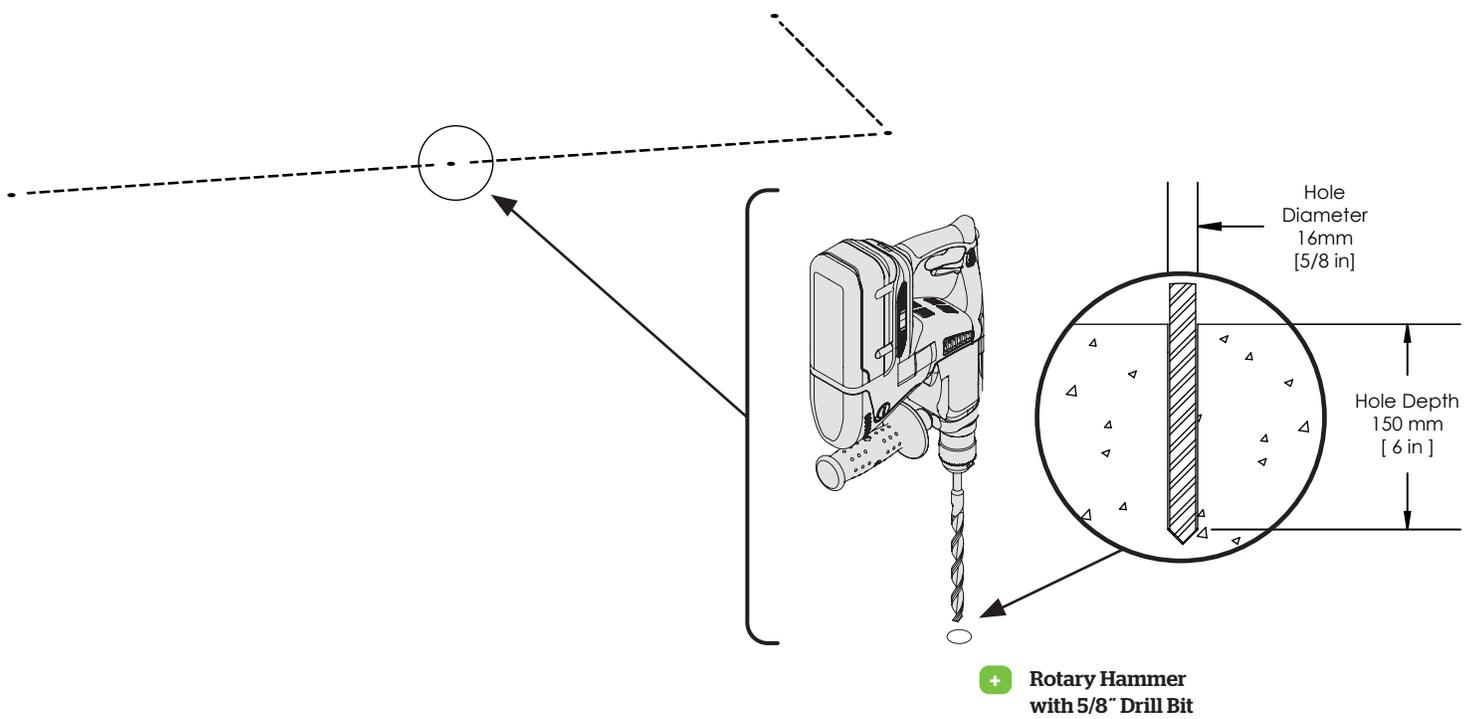




3

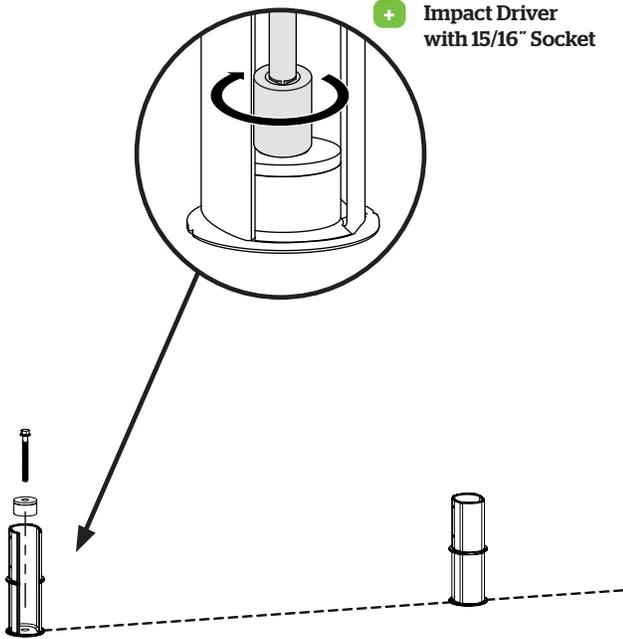


+ Impact Driver  
with 15/16" Socket

4

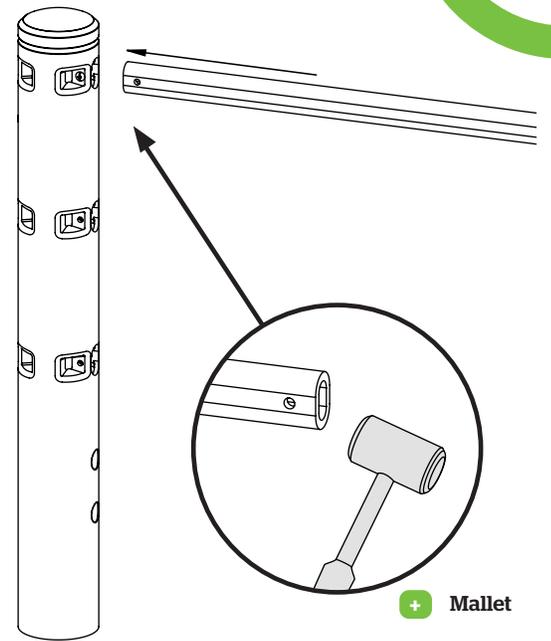

+ Mallet


5

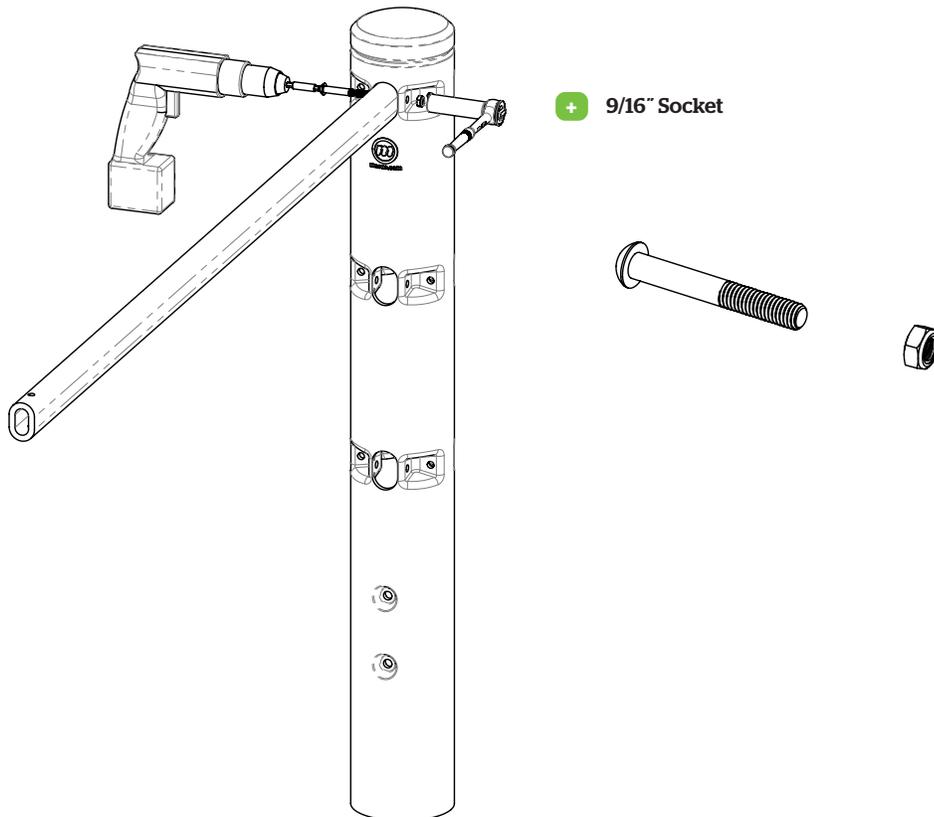


+ 9/16" Socket



6

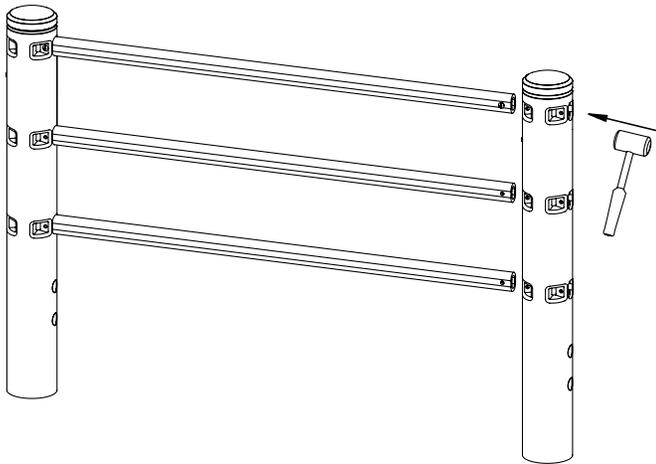


7

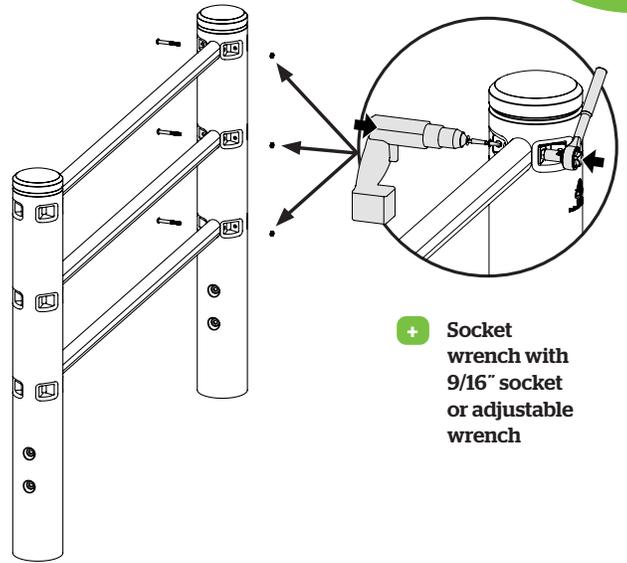


+ Socket wrench with 9/16" socket or adjustable wrench

8

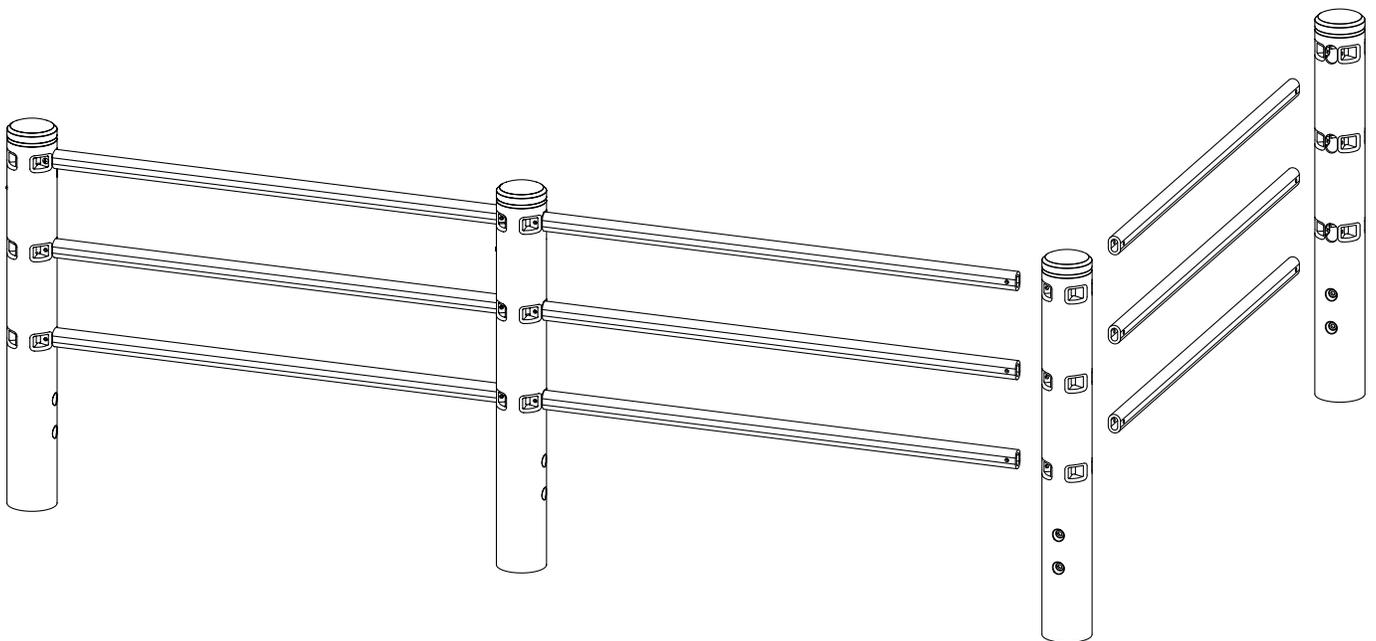




9

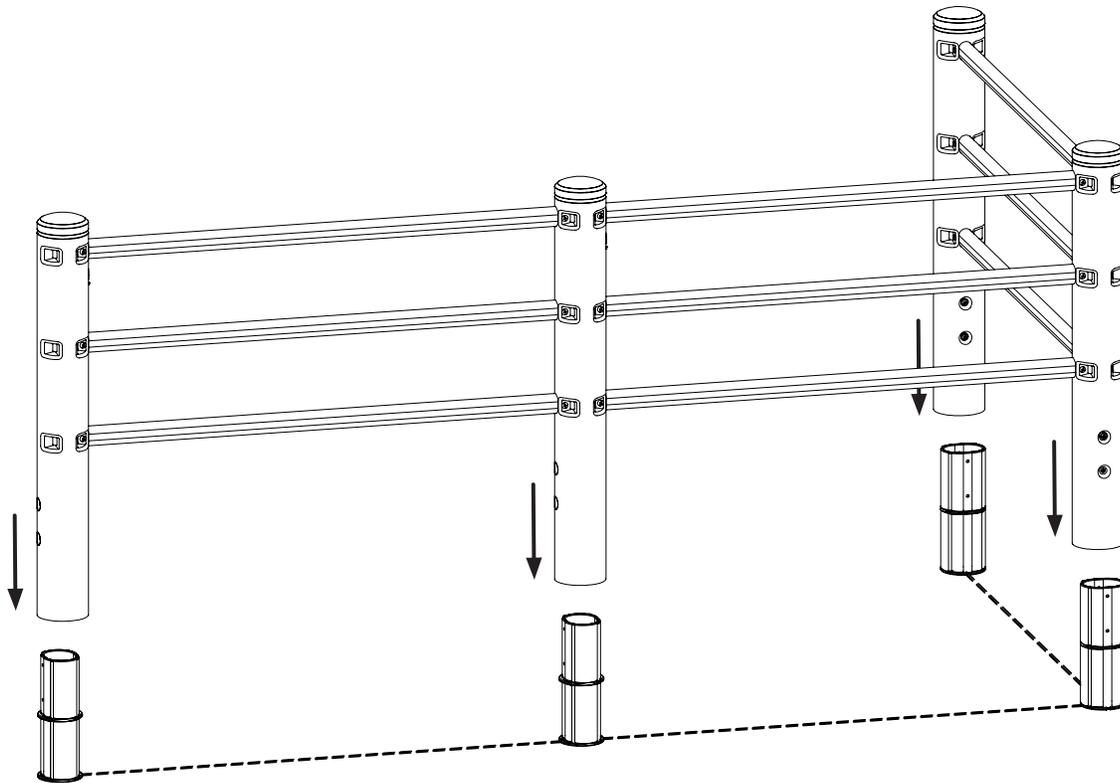

10

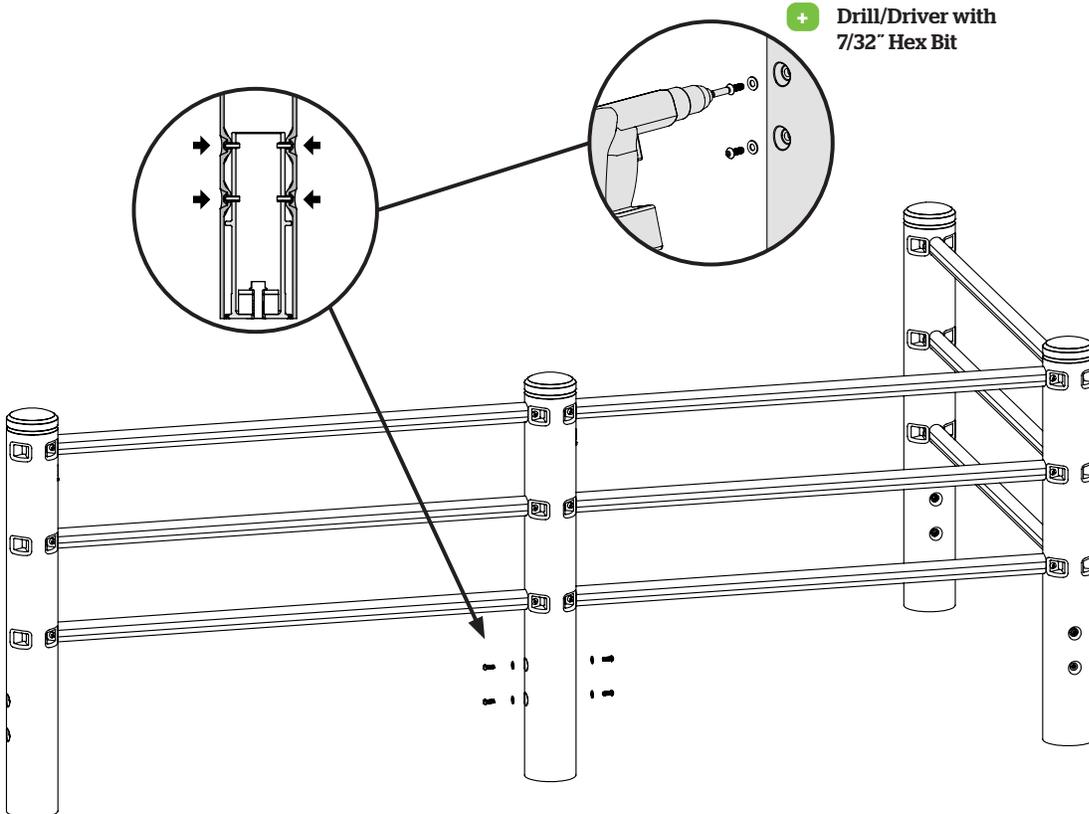

+ Drill/Driver with  
7/32" Hex Bit

